




 





 









Original	Replacement
	Power
	Mute / Dimmer
	Fav / Marker / PC
	Smart / List
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Display / Media
	D.Menu / Top

Original	Replacement
	Vol+
	Vol-
	I<< / Preset-
	Guide / EPG / -/--
	CH+ / Page+
	CH- / Page-
	Info / Angle
	Exit / Cancel / Clear
	Menu / Home
	Back / Return
	Up
	Down
	Right
	Left
	OK
	Rec / Rec Mode
	Play / Slow





Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Text		Text / Goto
	SUBT.		Subtitle / EQ
	Audio		Audio / Lang I/II
	OPT		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

