



Original	Replacement	Original	Replacement
 Standby	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Zoom/Aspect	 Shift + Zoom /
 2	 2	 Zoom/Aspect	 Picture / Format
 3	 3	 CH-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 OK
 9	 9	 Right	 Right
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 0	 0	 Down	 Down
 List	 Smart / List	 Source	 AV / Input / RDS
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Info/Display	 Display / Media	 Green	 Green / APP / Repeat
 Info/Display	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat





Original		Replacement		Original		Replacement	
	Blue		Blue / Prime Video / Random		>>I		>>I / Preset+
	TTX		Text / Goto		FAV		Fav / Marker / PC
	Index		D.Menu / Top				
	Hold		Shift + Stop /				
	I/II/Audio		Audio / Lang I/II				
	Repeat/Rec		Rec / Rec Mode				
	Repeat/Rec		Shift + Green / APP /				
	Stop/Reveal		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Size		Zoom / Size				
	Subtitle		Subtitle / EQ				
	<</Subpage		<< / Tune-				
	>>		>> / Tune+				
	Tv/Radio		TV/Radio /				
	I<<		I<< / Preset-				
	EPG		Guide / EPG / -/--				

