











Original		Replacement		Original		Replacement	
	Power		Power		Recall		Pre Ch
	TV / SAT		AV		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Right		Right
	2		2		Down		Down
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol +		Vol +
	6		6		Vol -		Vol -
	7		7		CH&Page +		Ch +
	8		8		CH&Page -		Ch -
	9		9		Red / TTX		Red
	0		0		Red / TTX		Text
	SAT		Smart		Green / SUB.T		Green
	Menu		Menu		Green / SUB.T		Subt
	FAV	+	Shift + Pre Ch		Yellow / Zoom		Yellow
	EPG		Guide		Yellow / Zoom		Eject





Original		Replacement		Original		Replacement	
	Blue / MP		Blue				
	TV / Radio		TV/R				
	Audio		Dual				
	Pause		Pause				
	POS		Format				
	REC		Rec				
	PN		3D				
	Info		Info				
	T/S		Sleep				

