





 



 

 

 

 

 



 



 



 

 

 

 

 

 

 

 

 



 

 











 







Original	Replacement	Original	Replacement
 Power	 Power	 CHN List	 Smart / List
 Mute	 Mute / Dimmer	 0	 0
 Picture	 Picture / Format	 Return / Back	 Back / Return
 Sound	 Sound / Title	 Menu	 Menu / Home
 Zoom	 Zoom / Size	 Up	 Up
 Subtitle	 Subtitle / EQ	 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--	 Left	 Left
 FAV	 Fav / Marker / PC	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 TV / Radio	 TV/Radio /
 5	 5	 Vol +	 Vol+
 6	 6	 Home	 D.Menu / Top
 7	 7	 PR +	 CH+ / Page+
 8	 8	 Vol -	 Vol-
 9	 9	 PR -	 CH- / Page-





Original	Replacement
Rec	Rec / Rec Mode
Sleep	Sleep / Timer
Info	Info / Angle
Play/Pause / Index	Play / Slow
Play/Pause / Index	Pause / Step / Freeze
<< / Reveal	<< / Tune-
>> / Mix	>> / Tune+
Stop / Cancel	Stop / Hold
I<< / Size	I<< / Preset-
>>I / Sub-Page	>>I / Preset+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I/II / Nicam	Audio / Lang I/II
Text	Text / Goto
Freeze / Hold	Shift + Stop / Hold

Hold

Original	Replacement
PVR List	Display / Media
Quick	Setup / OPT /
AD	Eject / Surround
3D	Shift + 3

