
 

 

 



 



 
 


 

 
 



 



 

 

 

 
 
 





Original		Replacement		Original		Replacement	
	Power		Power		Search		TV/R
	Open / Close		Eject		Setup		Options
	1		1		Title		List
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		Enter		Ok
	7		7		PBC		Smart
	8		8		Menu		Menu
	9		9		Audio		Dual
	0		0		Zoom		Shift + Eject
	10 +		Guide		USB / Card		Media
	Display		Info		Step II >		Shift + Pause
	Subtitle		Subt		Stop		Stop
	Vol +		Vol +		Play / Pause		Play
	Vol -		Vol -		Play / Pause		Pause





Original		Replacement		Original		Replacement	
	I<< Prev		I<<				
	Next >>I		>>I				
	<< Rev		<<				
	Fwd >>		>>				
	L / R	 + 	Shift + Dual				
	N / P		3D				
	Angle		Format				
	Mute		Mute				
	Program		Sleep				
	Clear		Exit				
	Repeat		Text				
	A - B	 + 	Shift + Text				
	V - Mode		Green				
	TV - Mode		Yellow				
	Slow	 + 	Shift + Play				
	Return		Back				

