 

 



 

 



 



 





 





 


 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Auto	 Eject / Surround

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 FAV+	 Shift + Yellow / YouTube /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Repeat/FAV-	 Shift + Green / APP /
 CH-	 CH- / Page-
 Text	 Text / Goto





Original		Replacement		Original		Replacement	
	<<		<< / Tune-		Subtitle		Subtitle / EQ
	>>/Hold		>> / Tune+				
	I<</Index		I<< / Preset-				
	>>I/Size		>>I / Preset+				
	Play		Play / Slow				
	Pause/Timeshift		Pause / Step / Freeze				
	Stop/Subpage		Stop / Hold				
	Zoom/Reveal		Zoom / Size				
	Sleep		Sleep / Timer				
	Tv/Radio		TV/Radio /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Audio/Nicam		Audio / Lang I/II				
	Guide		Guide / EPG / -/--				
	Rec		Rec / Rec Mode				

