

 



 


 

 
 
 




 



 

 
 


 
 









 





 



 


 
 


 

 
 


 
 








Original		Replacement		Original		Replacement	
	Standby		Power		Left / Vol -		Vol -
	Mute		Mute		OK		Ok
	EPG		Guide		Favourite		Pre Ch
	Audio		Dual		TV / Radio		TV/R
	Info		Info		Recall		Back
	PVR		Smart		Goto		Shift + Guide
	TTX		Text		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		<< REV		<<





	Original		Replacement
	FWD >>		>>
	I<< Prev		I<<
	Next >>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat	 + 	Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

	Original		Replacement

