



Original	Replacement
Power TV	Power
Power STB	+ Shift + Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Vol+	Vol +
Vol-	Vol -

Original	Replacement
Mute	Mute
CH.List	List
P+	Ch +
P-	Ch -
Menu	Menu
Smart Hub	Smart
Guide	Guide
Tools	Options
Info	Info
Back/Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red





Original		Replacement		Original	Replacement
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	D		Dual		
	Status		TV/R		
	More		3D		
	E-Manual		D. Menu		
	Recommend		Format		
	AD/Subt		Subt		
	<<		<<		
	I<<		I<<		
	Pause		Pause		
	>>		>>		
	>>I		>>I		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

