





















 











Original	Replacement
	 Power
	 Shift + 2
	 Shift + 4
	 Sound / Title
	 Menu / Home
	 Display / Media
	 Eject / Surround
	 CH+ / Page+
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Setup / OPT /
	 Right
	 Back / Return
	 CH- / Page-
	 Down

Original	Replacement
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 Zoom / Size
	 Audio / Lang I/II
	 Subtitle / EQ
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 TV/Radio /
	 Text / Goto
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Rec / Rec Mode





	Original	Replacement		Replacement
	Speed / Angle	 Info / Angle		
	TV / VCR	 Smart / List		
	1 / Tracking -	 1		
	1 / Tracking -	 Vol-		
	2	 2		
	3 / Tracking +	 3		
	3 / Tracking +	 Vol+		
	4	 4		
	5	 5		
	6	 6		
	System	 D.Menu / Top		
	7	 7		
	8	 8		
	9	 9		
	0	 0		

Original	Replacement	Original	Replacement

