





 







 

 

 

 



 












 
 






Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute		5		5
	Display		Shift + Info		6		6
	Sleep		Sleep		7		7
	Pic. Size		TV/R		8		8
	P. Mode		Shift + Format		9		9
	S. Mode		Dual		0		0
	Still		Pause		-/--		Shift + Guide
	PIP		Shift + 1		Return		Back
	P. Input		Shift + 2		CH +		Ch +
	P. Position		Shift + 3		CH -		Ch -
	P. Size		Format		Vol +		Vol +
	P. Swap		Shift + 5		Vol -		Vol -
	S. Input		Shift + 6		TV Menu		Menu
	1		1		DVB Menu		Shift + Menu
	2		2		Up		Up
	3		3		Left		Left





Original		Replacement		Original		Replacement	
	Enter		Ok		DVB Source		Media
	Right		Right		P.Scan		>>
	Down		Down		Key Lock		Rec
	AV / TV		AV		Surround		3D
	Exit		Exit		Info		Info
	Text		Text		FAV		Pre Ch
	Hold		Stop		Nicam / A2		Options
	Index		Smart		EPG		Guide
	Cancel		Shift + Exit		Subtitle		Subt
	Mix		Shift + Text		Audio		Shift + Dual
	Size		Eject				
	Sub Page		Shift + Subt				
	Reveal		Shift + Ok				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				

