



| Original | Replacement | Original | Replacement |
|----------|---------------|----------|----------------|
| Power | Power | Exit | Exit |
| Mute | Mute | Up/PR+ | Up |
| 1 | 1 | Down/PR- | Down |
| 2 | 2 | Right | Right |
| 3 | 3 | Left | Left |
| 4 | 4 | OK/List | Ok |
| 5 | 5 | Vol+ | Vol + |
| 6 | 6 | Vol- | Vol - |
| 7 | 7 | [+] | 3D |
| 8 | 8 | UHF | HOME SMART |
| 9 | 9 | ↑ | + CH |
| 0 | 0 | ↓ | CH - |
| Tv/Radio | SEARCH TV/R | FAV | FAV PRE-CH |
| ←PR | RETURN BACK | PAL/NTSC | PICTURE FORMAT |
| EPG | - / - GUIDE | Red | Red |
| Menu | TOP MENU MENU | Green | Green |
| Info | DISPLAY INFO | Yellow | Yellow |



