



 


 


 

 
 


 






Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info
 1	 1	 Video	 Smart
 2	 2	 Stop	 Stop
 3	 3	 TVD / Play/Pause	 TV/R
 4	 4	 TVD / Play/Pause	 Play
 5	 5	 TVD / Play/Pause	 Pause
 6	 6	 All / Rec/Rot	 Rec
 7	 7	 S.TIT	 Subt
 8	 8	 St - Mo	 Options
 9	 9	 Red / I<<	 Red
 0	 0	 Red / I<<	 I<<
 Volume +	 Vol +	 Green / >>I	 Green
 Volume -	 Vol -	 Green / >>I	 >>I
 Progr. +	 Ch +	 Yellow / <<<	 Yellow
 Progr. -	 Ch -	 Yellow / <<<	 <<<
 Audio	 Dual	 Blue / >>>	 Blue
 Mute	 Mute	 Blue / >>>	 >>>





Original		Replacement		Original		Replacement	
	Menu		Menu				
	Canc / Zoom		Eject				
	Exit		Exit				
	Up		Up				
	Left		Left				
	OK		Ok				
	Right		Right				
	Down		Down				
	EPG		Guide				
	Input		AV				
	FAV		Pre Ch				
	Aspect		Format				

