


 
 

 







 
 



 

 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Display	 Info
 Mute	 Mute	 Sleep	 Sleep
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 FAV/List	 Shift + Pre Ch
 6	 6	 Clock	 Shift + AV
 7	 7	 List	 List
 8	 8	 Tv/Radio	 TV/R
 9	 9	 Aspect	 Format
 0	 0	 Freeze	 Pause
 -/--	 GUIDE	 Index	 Options
 Recall	 PRE-CH	 Cancel	 Back
 Menu	 MENU	 Subpage	 Subt
 Source	 AV	 Text	 Text
 Exit	 EXIT	 Size	 Eject





Original	Replacement	Original	Replacement
 REVEAL	Reveal	 APP MEDIA	Media
 HOLD	Hold	 SOUND DUAL	Dual
 MIX	Mix	 SHIFT + APP MEDIA	Shift + Media
 RED	Red	 A	Red
 GREEN	Green	 B	Green
 YELLOW	Yellow	 C	Yellow
 CYAN	Cyan	 D	Blue
 NICAM	Nicam	 HOME SMART	Smart
 P.MODE	P.Mode	 SHIFT + PICTURE FORMAT	Shift + Format
 S.MODE	S.Mode	 SHIFT + SOUND DUAL	Shift + Dual
 OK	OK	 OK	Ok
 Up	Up	 Up	Up
 Down	Down	 Down	Down
 Right	Right	 Right	Right
 Left	Left	 Left	Left

