











 




 



 







 

 






Original	Replacement
	 Power
	 Stop
	 Pause
	 Rec
	 <<
	 Play
	 >>
	 Menu
	 TV/R
	 Pre Ch
	 Guide
	 List
	 AV
	 Smart
	 Shift + Smart
	 Exit
	 Red

Original	Replacement
	 Green
	 Yellow
	 Blue
	 Info
	 Options
	 Back
	 Format
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Vol +
	 Vol -
	 Mute
	 Media
	 Ch +





Original	Replacement	Original	Replacement

