







 

 
 


 






Original	Replacement
 Power	 Power
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 +  Shift + Guide
 Mute	 Mute
 Title/TTX	 Text
 Menu	 Menu
 Display	 Info

Original	Replacement
 Prog / EPG	 Guide
 Prog / EPG	 Sleep
 PBC	 Smart
 GOTO	 Media
 Vol -	 Vol -
 Vol +	 Vol +
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 Setup	 Options
 Return	 Back
 Up	 Up
 Left / Fav-	 Left
 Enter	 Ok
 Right / FAV+	 Right
 Source	 AV
 TV / Radio	 TV/R





	Original	Replacement	Original	Replacement
	<< REV	 <<		
	>> FWD	 >>		
	I<< Prev	 I<<		
	>>I Next	 >>I		
	3D	 3D		
	Subtitle	 AD SUBT Subt		
	Zoom	 ZOOM ▲ Eject		
	Mode	 PICTURE FORMAT Format		
	Digest	 E-MANUAL D.MENU D. Menu		
	Language	 SOUND DUAL Dual		
	L / R	 C Yellow		
	P / N	 D Blue		
	Repeat	 SHIFT + REPEAT TEXT Shift + Text		
	A-B	 SHIFT + SEARCH TV/R Shift + TV/R		
	Angle	 SHIFT + HOME SMART Shift + Smart		
	Slow	 SHIFT + PAUSE Pause Shift + Pause		
	Down	 Down		

