







 
 
















 





 

















 





















Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Display		Display / Media
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	EPG		Guide / EPG / -/--
	CH+		CH+ / Page+
	Vol-		Vol-
	Tv/Radio		TV/Radio /
	CH-		CH- / Page-
	Open/Close		Eject / Surround





Original	Replacement
Subtitle	Subtitle / EQ
CH List	Smart / List
Rec	Rec / Rec Mode
Rec List	D.Menu / Top
Tv/TXT/D.Pro	Text / Goto
Cancel/D.Rep	Shift + Exit / Cancel / Clear
Reveal/D.Goto	Setup / OPT /
Nicam/D.Slow	Audio / Lang I/II
I<</Index	I<< / Preset-
>>I/Hold	>>I / Preset+
Size/D.Zoom	Zoom / Size
Subpage/D.Title	Info / Angle
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold

Original	Replacement
Red/D.Set	Red / Netflix / Search
Green/D.Menu	Green / APP / Repeat
Yellow/D.Sub	Yellow / YouTube / Repeat
Blue/D.Lan	Blue / Prime Video / Random

