



Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 Vol+ Tv	 Vol+
 AV Input Tv	 AV / Input / RDS
 Vol- Tv	 Vol-
 1	 1
 2	 2
 3	 3
 Open/Close	 Eject / Surround
 4	 4
 5	 5
 6	 6
 PIP	 Picture / Format
 7	 7
 8	 8
 9	 9
 Miracast	 Display / Media

Original	Replacement
 Cancel	 Shift + Exit / Cancel / Clear
 0	 0
 Audio	 Audio / Lang I/II
 Internet	 Text / Goto
 << Slow Search	 << / Tune-
 Play	 Play / Slow
 Slow Search >>	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Skip >>I	 >>I / Preset+
 Status	 Info / Angle
 Stop	 Stop / Hold
 Exit	 Exit / Cancel / Clear
 Pop-Up Menu	 Smart / List
 Top Menu	 D.Menu / Top
 Up	 Up
 Home	 Menu / Home





	Original	Replacement	Original	Replacement
	Left	Left		
	OK	OK		
	Right / II>	Right		
	Option	Setup / OPT /		
	Down	Down		
	Return	Back / Return		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

