



Original		Replacement		Original		Replacement	
	Power		Power		Subtitle		Subtitle / EQ
	Open / Close		Eject / Surround		I<<		I<< / Preset-
	Dimmer		Shift + Mute / Dimmer		Mo/St / Slow		Display / Media
	BD		Shift + 2		Pause		Pause / Step / Freeze
	Tuner		Shift + 6		>>I		>>I / Preset+
	AUX		Shift + 7		<<		<< / Tune-
	1 / RDS Display		1		Stop		Stop / Hold
	2		2		Play		Play / Slow
	3 / TA		3		>>		>> / Tune+
	4 / PTY-		4		Vol+		Vol+
	5 / PTY Search		5		Mute		Mute / Dimmer
	6 / PTY+		6		Tuning+ / CH+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		Step		Shift + Pause / Step /
	9		9		Tuning- / CH-		CH- / Page-
	Audio		Audio / Lang I/II		Menu		Menu / Home
	0		0		Return		Back / Return





Original	Replacement
	Up
	Left
	OK
	Right
	Info / Angle
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + D.Menu / Top Menu
	D.Menu / Top
	Shift + Sound / Title
	Sound / Title
	Rec / Rec Mode
	Picture / Format

Original	Replacement
	Smart / List
	Setup / OPT /
	Shift + Green / APP /
	Shift + Yellow / YouTube /
	Zoom / Size
	Sleep / Timer

