



 
 





 

 


 




 














Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [S]	 Guide
 [-o-]	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 CMS	 Smart
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Exit	 Exit
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 List	 List
 Subt	 Subt
 Internet	 Media
 Audio	 Dual
 [+]	 Format





Original	Replacement	Original	Replacement
[^^']	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
[≡^']	3D		
*	Options		
i	Info		
<<<	<<<		
>>>	>>>		
Play	Play		
■	Stop		
Music/Photo/Video	TV/R		

