




Original	Replacement	Original	Replacement
On	Power	Left	Left
Off	Shift + Power	1	1
Vol+	Vol +	2	2
Vol-	Vol -	3	3
Mute	Mute	4	4
Test	Smart	5	5
Night	Exit	6	6
[=]	Text	7	7
Sleep	Sleep	8	8
Surr.	Dual	9	9
SPKR/Menu	Menu	0	0
Delay/Normal	Info	Tun-M/[≡+]	Shift + Guide
CH./[≡?]	TV/R	Mem/[≡◇]	Pre Ch
Digital/[≡X]	Media	Tuning ▲	Ch +
Up	Up	Tuning ▼	Ch -
Down	Down	Direct/Green	Green
Right	Right	Clear/Yellow	Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 


 
 
 



 


 
 


 


 









Original	Replacement
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS/D.Skip	 Options
 Set	 Ok
 Red	 Red
 Blue	 Blue
 DVD	 Shift + 2
 AVR	 Shift + 1
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 VID4	 Shift + 8
 AM/FM	 Shift + 9
 6 CH.	 Guide

Original	Replacement
 > DVD	 Play
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I





Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 









 

 
 



 


 



 
 

 

 



 

 
 




 







 




 

 
 





 








Original	Replacement	Original	Replacement
			
			
			
			
			





Original	Replacement	Original	Replacement
 Power On	 Power	 Preset ▲/Blue	 Ch +
 Power Off	 Shift + Power	 RDS/D.Skip	 Options
 SPKR/Menu	 Menu	 >>	 >>
 Delay/Normal	 Info	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	 <<	 <<
 6	 6	 Power (On /Off)	 Media
 7	 7	 PR+ VCR	 Shift + Ch +
 8	 8	 PR- VCR	 Ch -
 9	 9	 Vol+ VCR	 Vol +
 0	 0	 Vol- VCR	 Vol -
 Tun-M/[≡+]	 Guide	 Input VCR	 AV
 Mem/[≡◆]	 Pre Ch	 1 VCR	 Shift + 1
 Direct	 Smart	 2 VCR	 Shift + 2





Original		Replacement		Original	Replacement
	3 VCR	 + 	Shift + 3		
	4 VCR	 + 	Shift + 4		
	5 VCR	 + 	Shift + 5		
	6 VCR	 + 	Shift + 6		
	7 VCR	 + 	Shift + 7		
	8 VCR	 + 	Shift + 8		
	9 VCR	 + 	Shift + 9		
	0 VCR	 + 	Shift + 0		
	Clear VCR		Exit		
	Play VCR		Red		
	Stop VCR		Green		
	Rec VCR		Rec		
	>> VCR		Blue		
	<< VCR		Yellow		





	Original	Replacement	Original	Replacement
	<>	 PLAY MODE		Play
	>>			>>
	<<			<<
	Stop			Stop
	Rec	 REC MODE		Rec

