



	Original	Replacement		Original	Replacement
	Power		Power		Stop
	TV/AV		AV		Vol +
	1		1		Vol -
	2		2		Mute
	3		3		Up
	4		4		Down
	5		5		Right
	6		6		Left
	7		7		Ok
	8		8		Sys Menu
	9		9		D. Menu
	0		0		Display
	-/--		GUIDE		Shift + Info
	Return		BACK		Picture
	Eject		Eject		Sound
	Play		Play		Shift + Dual
	Pause		Pause		Shift + AV
					Nicam/A2
					Options
					Lan/Prog-
					Ch -
					Zoom/Prog+
					Ch +





Original	Replacement	Original	Replacement
 SUB	 Subt		
 Goto	 TV/R		
 Set/Tv/TXT/DVB	 Text		
 Menu/Cancel Tv Format	 Menu		
 Lang/Reveal Exit	 Dual		
 Title/Info	 Info		
 <</Hold	 <<		
 >>/Size Text	 >>		
 I<</Subpage/F	 I<<		
 >>I/Index/EPG	 >>I		
 Red/Prog/Tv/Radi	 Red		
 Green/Slow/Audio	 Green		
 Yellow/Rep/Freeze	 Yellow		
 Blue/A-B/Subtitle	 Blue		

