

 






 

 



 

 

 

 

 

 



 

 






Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Status	 AV
 PIP	 3D
 Audio	 Dual
 Miracast	 TV/R
 Internet	 Shift + Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 #	 Guide
 */Cancel	 Format
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Pause	 Pause
 >>I	 >>I
 Stop	 Stop
 [...] / CC	 Subt
 X / Exit	 Exit
 Pop-Up Menu / Top Menu	 Menu
 Netflix	 Media
 Home	 Smart
 Option	 Options
 Return	 Back
 Up	 Up





Original	Replacement	Original	Replacement
Down	Down		
Right	Right		
Left	Left		
OK	Ok		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Power Tv	Shift + Power		
AV Input Tv	Shift + AV		
Tv Vol+	Vol +		
Tv Vol-	Vol -		

