













 

 

 

 

 

 

 
 
 







| Original   | Replacement   | Original   | Replacement   |
|--|---|--|---|
|  Power          |  Power                       |  F1 / Find      |  D.Menu / Top            |
|  Mute           |  Mute / Dimmer               |  F2 / Zoom      |  Zoom / Size             |
|  Red            |  Red / Netflix / Search      |  F2 / Zoom      |  Setup / OPT /           |
|  Green / Aspect |  Green / APP / Repeat        |  F3 / TXT       |  Smart / List            |
|  Green / Aspect |  Picture / Format            |  F3 / TXT       |  Text / Goto             |
|  Yellow         |  Yellow / YouTube / Repeat   |  F4             |  Display / Media         |
|  Blue / SUBT    |  Subtitle / EQ               |  Menu           |  Menu / Home             |
|  Blue / SUBT    |  Blue / Prime Video / Random |  Up / CH+       |  Up                      |
|  <<             |  << / Tune-                  |  Info           |  Info / Angle            |
|  >>            |  >> / Tune+                 |  Left / Vol-   |  Left                   |
|  I<<          |  I<< / Preset-             |  OK           |  OK                    |
|  >>I          |  >>I / Preset+             |  Right / Vol+ |  Right                 |
|  USB          |  Shift + 8                 |  FAV          |  Fav / Marker / PC     |
|  Play / Pause |  Play / Slow               |  Down / CH-   |  Down                  |
|  Play / Pause |  Pause / Step / Freeze     |  Exit         |  Exit / Cancel / Clear |
|  Stop         |  Stop / Hold               |  Vol+         |  Vol+                  |
|  Rec          |  Rec / Rec Mode            |  EPG          |  Guide / EPG / -/-     |



 






 

 

 



 





 





 









| Original   | Replacement   |
|--|---|
|  Pag+         |  CH+ / Page+       |
|  Vol-         |  Vol-              |
|  Audio        |  Audio / Lang I/II |
|  Pag-         |  CH- / Page-       |
|  1            |  1                 |
|  2            |  2                 |
|  3            |  3                 |
|  4            |  4                 |
|  5            |  5                 |
|  6            |  6                 |
|  7           |  7                |
|  8          |  8               |
|  9          |  9               |
|  Recall     |  Back / Return   |
|  0          |  0               |
|  TV / Radio |  TV/Radio /      |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |











 

 

 

 

 





 

 





 
 


| Original   | Replacement   |
|--|---|
|  Power          |  Power                       |
|  Mute           |  Mute / Dimmer               |
|  Red            |  Red / Netflix / Search      |
|  Green / Aspect |  Picture / Format            |
|  Green / Aspect |  Green / APP / Repeat        |
|  Yellow         |  Yellow / YouTube / Repeat   |
|  Blue / SUBT    |  Subtitle / EQ               |
|  Blue / SUBT    |  Blue / Prime Video / Random |
|  <<             |  << / Tune-                  |
|  >>            |  >> / Tune+                 |
|  I<<          |  I<< / Preset-             |
|  >>I          |  >>I / Preset+             |
|  USB          |  Shift + 8                 |
|  Play / Pause |  Play / Slow               |
|  Play / Pause |  Pause / Step / Freeze     |
|  Stop         |  Stop / Hold               |
|  Rec          |  Rec / Rec Mode            |

| Original   | Replacement   |
|--|---|
|  F1 / Find      |  D.Menu / Top            |
|  F2 / Zoom      |  Setup / OPT /           |
|  F2 / Zoom      |  Zoom / Size             |
|  F3 / TXT       |  Text / Goto             |
|  F3 / TXT       |  Smart / List            |
|  F4             |  Display / Media         |
|  Menu           |  Menu / Home             |
|  Up / CH+       |  Up                      |
|  Info           |  Info / Angle            |
|  Left / Vol-   |  Left                   |
|  OK           |  OK                    |
|  Right / Vol+ |  Right                 |
|  FAV          |  Fav / Marker / PC     |
|  Down / CH-   |  Down                  |
|  Exit         |  Exit / Cancel / Clear |
|  Vol+         |  Vol+                  |
|  EPG          |  Guide / EPG / -/-     |





| Original  |            | Replacement   |                   |
|---|------------|---|-------------------|
|    | Pag+       |    | CH+ / Page+       |
|    | Vol-       |    | Vol-              |
|    | Audio      |    | Audio / Lang I/II |
|    | Pag-       |    | CH- / Page-       |
|    | 1          |    | 1                 |
|    | 2          |    | 2                 |
|    | 3          |    | 3                 |
|    | 4          |    | 4                 |
|    | 5          |    | 5                 |
|   | 6          |   | 6                 |
|  | 7          |  | 7                 |
|  | 8          |  | 8                 |
|  | 9          |  | 9                 |
|  | Recall     |  | Back / Return     |
|  | 0          |  | 0                 |
|  | TV / Radio |  | TV/Radio /        |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

