






 















 







 

 

 













 



 





 

 


 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Guide		Guide
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Left / V-		Left
	Left / V-		Vol -
	OK		Ok
	Right / V+		Right
	Right / V+		Vol +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	i		Info
	TV / Radio		TV/R
	SAT		Smart
	FAV		Pre Ch
	Audio		Dual
	Subtitle		Subt
	Text		Text
	Red		Red
	Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	UHF		Media		
	Sleep		Sleep		
	<<		<<		
	Play		Play		
	Pause		Pause		
	>>		>>		
	Step		Shift + Pause		
	Stop		Stop		
	Rec		Rec		
	Hold		Shift + Stop		

