


 
 







 

 



 






 

 

 



 

 



 



 


 


 




Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Tv/DVB-T	 Smart	 0	 0
 [ ]/Line	 Media	 -/--	 Shift + Guide
 [ +]/Display	 Info	 PRE	 Pre Ch
 [≡]/TXT	 Text	 Vol+	 Vol +
 PIP On/Off	 Shift + 3D	 Vol-	 Vol -
 PIP Swap	 Shift + Subt	 Prog+	 Ch +
 PIP Source	 Shift + AV	 Prog-	 Ch -
 PIP Sound	 Shift + TV/R	 MS	 Back
 1	 1	 [▼]/Still	 AV
 2	 2	 Timer/Sleep	 Shift + Power
 3	 3	 [II]/Tv Menu	 Menu
 4	 4	 -I/I-/P.STD	 Shift + Format
 5	 5	 -I/I-/S.STD	 Shift + Dual
 6	 6	 Up/P+	 Up
 7	 7	 Down/P-	 Down





Original	Replacement	Original	Replacement
 Right/Vol+	 Right	 Blue/Menu	 Blue
 Left/Vol-	 Left	 Timer/repeat	 Shift + Text
 Enter	 Ok	 [≡i]/A-B	 Shift + Info
 [<>]/P.Size	 Format	 [ /≡]/Audio	 Dual
 -IXI/Exit	 Exit	 [≡♦]/Subtitle	 Subt
 Open/Close	 Eject	 [≡?]/Goto	 Options
 Rec	 Rec	 [≡+]/Program/Me	 TV/R
 Stop	 Stop	 [<≡]/List/Angle	 Shift + Ch -
 Play	 Play	 [≡>]/Bookmark/O	 Shift + Ch +
 Pause	 Pause	 [≡o]/Zoom/EPG	 Guide
 <</< Slow	 <<	 [≡X]/Cancel/i	 3D
 Slow >/>>	 >>		
 I<</<I Step	 I<<		
 Step I>/>>I	 >>I		
 Red/Setup	 Red		
 Green/Input	 Green		
 Yellow/Title	 Yellow		

