



Original		Replacement		Original		Replacement	
	DVD / TV / AV		Power		Down / CH-		Down
	1		1		Down / CH-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		OK		Ok
	7		7		Pg Up		Shift + Ch +
	8		8		Pg Dn		Shift + Ch -
	9		9		Title		Smart
	0		0		Info		Info
	Mute		Mute		Goto / FAV		Pre Ch
	Repeat / TV/Radio		TV/R		Audio		Dual
	Repeat / TV/Radio		Shift + Text		Sub-T		Subt
	Exit		Exit		Zoom / TTX		Text
	Up / CH+		Up		Zoom / TTX		Eject
	Up / CH+		Ch +		Setup		Options





Original	Replacement	Original	Replacement
Menu / EPG	Menu		
Menu / EPG	Guide		
USB	Media		
Play / Pause	Play		
Play / Pause	Pause		
Stop	Stop		
Copy/Delete / Rec	Rec		
Red / <<	Red		
Red / <<	<<		
Green / >>	Green		
Green / >>	>>		
Yellow / I<<	Yellow		
Yellow / I<<	I<<		
Blue / >>I	>>I		
Blue / >>I	Blue		

