 

 

 

 



 





 


 


 




 
 



 

 



 

 

 







 
 
 





 













Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Power Tv	 Shift + Power	 9	 9
 Vol+ Tv	 Vol+	 Cast Vieta	 Shift + Display / Media
 CH+ Tv	 Shift + CH+ /	 Del	 Shift + Exit / Cancel / Clear
 Select Drive	 Smart / List	 Del	 Fav / Marker / PC
 AV Tv	 Shift + AV / Input / RDS	 0	 0
 Vol- Tv	 Vol-	 Input Select	 AV / Input / RDS
 CH- Tv	 Shift + CH- /	 Prog/Check	 TV/Radio /
 1	 1	 I<< Skip	 I<< / Preset-
 2	 2	 Skip >>I	 >>I / Preset+
 3	 3	 << Slow/Search	 << / Tune-
 CH/Page+	 CH+ / Page+	 Slow/Search >>	 >> / Tune+
 4	 4	 Stop	 Stop / Hold
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Play/x1.3	 Play / Slow
 CH/Page-	 CH- / Page-	 i/Status	 Info / Angle
 7	 7	 Guide	 Guide / EPG / -/-





Original	Replacement
Exit	Exit / Cancel / Clear
Direct Navigator	+ Shift + Smart / List
Direct Navigator	D.Menu / Top
<II/Left	Left
OK	OK
Up	Up
Right/II>	Right
Function Menu	Menu / Home
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green/Time Slip	Green / APP / Repeat
Yellow/Create Chapter	Yellow / YouTube / Repeat
Blue/Manual Skip	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	+ Shift + Rec / Rec Mode

Original	Replacement
Ext Link	Eject / Surround
Direct Tv Rec	Picture / Format
[≡]/Text	Text / Goto
[≡◆]/STTL	Subtitle / EQ
Audio	Audio / Lang I/II
Display	Display / Media

