








 


 

 
 
 



 

 

 

 


 
 


 
 


 

 


 






 

 
 

 

 


| Original | Replacement |
|---|--|
|  Power |  Power |
|  Eject iPod |  Shift + Pre Ch |
|  Eject CD |  Pre Ch |
|  Sleep |  Sleep |
|  Timer/Play |  Blue |
|  Clock/Timer |  Shift + AV |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide |

| Original | Replacement |
|--|---|
|  Del |  3D |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Program |  Shift + Sleep |
|  Repeat |  Text |
|  Play Mode |  Shift + Play |
|  Radio |  TV/R |
|  AUX |  AV |
|  Play/Pause CD |  Play |
|  Play/Pause iPod |  Pause |
|  >>/>>I |  >> |
|  <</<< |  << |
|  Stop |  Stop |
|  Re-Master |  Smart |
|  D.Bass |  Media |
|  Display/Dimmer |  Info |





| Original | | Replacement | | Original | Replacement |
|---|-------------|---|---------|----------|-------------|
|  | Surround |  | Dual | | |
|  | Preset EQ |  | Format | | |
|  | iPod Menu |  | Menu | | |
|  | Bass/Treble |  | Back | | |
|  | Up |  | Up | | |
|  | Down |  | Down | | |
|  | Right |  | Right | | |
|  | Left |  | Left | | |
|  | OK |  | Ok | | |
|  | Auto Off |  | Exit | | |
|  | Tune Mode |  | Subt | | |
|  | FM Mode |  | List | | |
|  | Input Level |  | Options | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

