



 


 
 








Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 On Screen	 Display / Media
 1	 1
 Repeat	 Green / APP / Repeat
 2	 2
 Program	 TV/Radio /
 3	 3
 Sleep	 Sleep / Timer
 Surround	 Shift + Eject / Surround
 4	 4
 Sound	 Sound / Title
 5	 5
 Zoom	 Zoom / Size
 6	 6
 Aspect	 Shift + Picture / Format
 7	 7

Original	Replacement
 8	 8
 9	 9
 0	 0
 Source	 AV / Input / RDS
 Color Mode	 Picture / Format
 Break	 Text / Goto
 Play	 Play / Slow
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left





	Original	Replacement	Original	Replacement
		Enter		OK
		Right		Right
		Setup		Setup / OPT /
		Down		Down
		Return		Back / Return
		Keystone Up		CH+ / Page+
		Visual Setup		Fav / Marker / PC
		Vol+		Vol+
		Keystone Down		CH- / Page-
		Mute		Mute / Dimmer
		Vol-		Vol-
		O)))/Audio		Audio / Lang I/II
		[...]/Subtitle		Subtitle / EQ
		Camera/Angle		Info / Angle
		Image On/Off		Smart / List

