



Original	Replacement	Original	Replacement
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Right		Right
	Down / P-		Down
	Down / P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--		Guide / EPG / -/--
	0		0
	P < P		Fav / Marker / PC
	PP		Back / Return
	Vol+		Vol+
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[TV]		Shift + 1
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS
	[≡]		Text / Goto





Original	Replacement	Original	Replacement
[≡⊕]	Subtitle / EQ		
[ /≡]	Picture / Format		
[≡X]	Exit / Cancel / Clear		
[≡↕]	Zoom / Size		
[≡?]	Display / Media		
[≡i]	Smart / List		





Original	Replacement	Original	Replacement
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<< / Tune-		<< / Tune-
	>> / Tune+		>> / Tune+







































	Original	Replacement	Original	Replacement
	⏮			I<< / Preset-
	⏭			>>I / Preset+
	▶/⏸			Play / Slow
	⏸			Pause / Step / Freeze
	■			Stop / Hold
	Title			Sound / Title
	Open / Close			Eject / Surround





Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Replacement	Original	Replacement
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

Original	Replacement	Original	Replacement

