



 



 


 
 

 





 







 


 
 


 
 

 
 

 

 


 
 






 
 

 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Blue	 Blue
 Mute	 Mute	 TV / DTV	 Smart
 1	 1	 Menu	 Menu
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Guide	 Guide
 8	 8	 Back	 Back
 9	 9	 P-	 Ch -
 0	 0	 P+	 Ch +
 i	 Info	 Vol+	 Vol +
 AV	 AV	 Vol-	 Vol -
 Red	 Red	 I/II	 Dual
 Green	 Green	 OO	 Shift + Dual
 Yellow	 Yellow	 TV / Radio	 TV/R







 

 

 
 
 






 
 



 
 
 
 
 

 





Original	Replacement	Original	Replacement
 Colour System	 Options		
 Sleep Timer	 Sleep		
 [...]	 Subt		
 Zoom	 Eject		
 [≡]	 Text		
 [≡i]	 List		
 [?]	 D. Menu		
 [↕]	 Format		
 [⊖]	 Shift + Subt		




 
 
 




 



 







	Original	Replacement	Original	Replacement
	Power			
	Menu			
	Back			
	OK			
	Up			
	Down			
	Right			
	Left			
	<<			
	Play			
	>>			
	Stop			
	Pause			
	Rec / Top Menu			
	↑			
	↓			





	Original	Replacement		Original	Replacement
	Power		Power		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		
	Up		Ch +		
	Down		Ch -		

