

 
 




 

 


 

 
 
 
 
 



 


 
 

 

 

 
 

 

 
 


 
 
 
 










Original	Replacement	Original	Replacement
	Standby - On		Power
	TV / DVD		AV
	Edit		TV/R
	Select		Info
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Menu Disc		D. Menu
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Browser		Smart
	Tuner		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	Rec Mode		Shift + Rec
	I<<		I<<
	>>I		>>I





Original	Replacement	Original	Replacement
Standby - On	Power	7	7
TV / DVD	TV/R	8	8
Up	Up	9	9
CH+	Ch +	0	0
CH-	Ch -	Rec	Rec
Down	Down	Return	Back
OK	Ok	Red	Red
Menu System	Menu	Green	Green
Timer	Sleep	Yellow	Yellow
T/C	Guide	Blue	Blue
Tuner	Subt	Tv Vol-	Vol -
1	1	Tv Vol+	Vol +
2	2		
3	3		
4	4		
5	5		
6	6		

