







 







 

 
 






 




 






























 
 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Home	 Menu / Home
 1	 1	 *	 Setup / OPT /
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Wheel Up	 Shift + Up
 5	 5	 Right	 Right
 6	 6	 OK	 OK
 7	 7	 Wheel Down	 Shift + Down
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 List	 Smart / List	 Guide	 Guide / EPG / -/-
 0/Quick Access	 0	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Prime Video	 Shift + Blue / Prime
 CH+	 CH+ / Page+	 Red	 Red / Netflix / Search
 Vol-	 Vol-	 Green	 Green / APP / Repeat
 CH-	 CH- / Page-	 Yellow	 Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
 Power	 Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 LIST
 VOL+	 SMART	 CH PAGE+	 MEDIA
 VOL-	 DISPLAY	 TV	 DVD
 1	 VIDEO 2	 CD- STB 3	 TAPE
 4	 TUNER 5	 AUX- HDD 7	 USB 8
 7	 BLUETOOTH 9	 GUIDE EPG	 HDMI - BAT 0
 NETFLIX	 APP	 YouTube	 FAV MARKER
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 www.mandis.tv			





Original	Replacement	Original	Replacement
	Blue		Blue / Prime Video / Random
	Movies		Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze

