



Original	Replacement
Open / Close	Eject / Surround
FL Dimmer	Mute / Dimmer
On / Standby	Power
Setup	Setup / OPT /
Display	Display / Media
Zoom	Zoom / Size
3D	Shift + 3
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Replacement
8	8
9	9
0	0
+10	Guide / EPG / -/-
T / Search	Red / Netflix / Search
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Return	Back / Return
REV	<< / Tune-
Play	Play / Slow
FWD	>> / Tune+





Original	Replacement	Original	Replacement
Pause / Step	Pause / Step / Freeze		
I<< Skip	I<< / Preset-		
Stop	Stop / Hold		
Skip >>I	>>I / Preset+		
Slow	Shift + Play /		
Random	Blue / Prime Video / Random		
Memory	Smart / List		
Repeat	Green / APP / Repeat		
A-B RPT	Yellow / YouTube / Repeat		

