


 

 
 
 

 










Original	Replacement	Original	Replacement
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Original	Replacement	Original	Replacement
	↑		BOOK
	↓		Smart
	A - B		
	STEP		
	STOP		
	PAUSE		
	REC		
	REW		
	PLAY		
	FWD		
	SUBTITLE		
	V-FORMAT		
	INFO		
	OPTION		
	PLAYLIST		
	LIST		
	TIME		
	Shift + Ch +		
	Shift + Ch -		
	I<<		
	>>I		
	Stop		
	Pause		
	Rec		
	<<		
	Play		
	>>		
	Subt		
	Format		
	Info		
	Options		
	Media		
	List		
	AV		

