
 


 






 
 

 



 

 
 











 

 
 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		OK		Ok
	1		1		Right / >>		Right
	2		2		Down		Down
	3		3		EPG		Guide
	4		4		Exit		Exit
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		∧		Ch +
	8		8		∨		Ch -
	9		9		<< / [ ↓ ]		<<
	0		0		>> / [ □ ]		>>
	[≡]		Text		Play		Play
	↑		Shift + Guide		Stop / [ ? ]		Stop
	Menu		Menu		Pause		Pause
	i		Info		Rec / [ ≡ ]		Rec
	Up		Up		RED / TV		Red
	Left /  <<		Left		Green / Picture		Green





Original		Replacement		Original		Replacement	
	RED / TV		AV				
	Yellow / Video		Yellow				
	Blue / Audio		Blue				
	www		Smart				
	♥		Pre Ch				
	?		Options				
	Orange		Media				

