



Original	Replacement
POWER	Power
MENU	Menu
LAST	Pre Ch
MUTE	Mute
TEXT	Text
MODE	TV/R
1	1
2	2
3	3
6	6
5	5
4	4
7	7
8	8
9	9
FAV	Shift + Pre Ch
0	0

Original	Replacement
GUIDE	Guide
UP	Up
OK	Ok
DOWN	Down
LEFT	Left
RIGHT	Right
VOL+	Vol +
VOL-	Vol -
PR-	Ch -
PR+	Ch +
SWAP	Shift + Green
ZOOM	Eject
RED / MOSAIC	Red
BACK	Back
GREEN / SLEEP	Green
YELLOW /	Yellow
BLUE / LIST	Blue





Original	Replacement	Original	Replacement
 PAGE DOWN	 Shift + Ch -		
 PAGE UP	 Shift + Ch +		
 TIME SHIFT	 Smart		
 STOP	 Stop		
 REC	 Rec		
 REW	 <<<		
 PLAY / PAUSE	 Play		
 FWD	 >>>		
 PLAY / PAUSE	 Pause		
 OPTION	 Options		
 PIP	 Shift + Red		
 TIMER	 AV		
 MEDIA	 Media		
 PAUSE	 Shift + Yellow		
 V. FORMAT	 Format		
 INFO	 Info		

Original	Replacement

