

















 







 



























 











 





Original	Replacement	Original	Replacement
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





	Original	Replacement		Original	Replacement
	Timer	Sleep / Timer			
	Pause/Step	Pause / Step / Freeze			
	I>/Slow	Eject / Surround			
	I<<	I<< / Preset-			
	Rec List	Smart / List			
	←/INS Replay	CH- / Page-			
	→/CM Skip	CH+ / Page+			
	>>I	>>I / Preset+			
	A-B	Yellow / YouTube / Repeat			
	Subtitle	Subtitle / EQ			
	Repeat	Green / APP / Repeat			
	<<	<< / Tune-			
	F1	D.Menu / Top			
	Source	AV / Input / RDS			
	Audio	Audio / Lang I/II			
	>>	>> / Tune+			

	Original	Replacement		Original	Replacement

