









Original	Replacement
	 Power
	 Display / Media
	 Setup / OPT /
	 Mute / Dimmer
	 Menu / Home
	 Sound / Title
	 Fav / Marker / PC
	 Zoom / Size
	 TV/Radio /
	 Info / Angle
	 Vol-
	 Vol+
	 Guide / EPG / -/-
	 Back / Return
	 Up
	 Left
	 OK

Original	Replacement
	 Right
	 Down
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Picture / Format
	 0
	 Text / Goto
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold





Original	Replacement	Original	Replacement
TIMER	Timer	TIMER SLEEP	Sleep / Timer
PAUSE/STEP	Pause/Step	STEP - FREEZE	Pause / Step / Freeze
SLOW	I>/Slow	SURROUND	Eject / Surround
PREV	I<<	PRESET-	I<< / Preset-
RECLIST	Rec List	LIST SMART	Smart / List
INS REPLAY	←/INS Replay	CH PAGE -	CH- / Page-
CM SKIP	→/CM Skip	CH PAGE +	CH+ / Page+
NEXT	>>I	PRESET+	>>I / Preset+
A-B	A-B	REPEAT A-B YouTube	Yellow / YouTube / Repeat
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
FR	<<	TUNE-	<< / Tune-
F1	F1	TOP MENU D.MENU	D.Menu / Top
SOURCE	Source	RDS AV INPUT	AV / Input / RDS
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
FF	>>	TUNE+	>> / Tune+

Original	Replacement	Original	Replacement

