



Original	Replacement
Sleep	Sleep / Timer
Power	Power
VIDEO 1	Shift + 4
DVD/LD	Shift + 2
VIDEO 2	Shift + 9
TV / SAT	Shift + 1
VIDEO 3	Shift + Guide / EPG / -/-
TV / SAT	Shift + 0
AUX	Shift + 7
PHONO	Shift + 8
CD/SACD	Shift + 3
MD/TAPE	Shift + 5
TUNER	Shift + 6
1	1
2	2
3	3
4	4

Original	Replacement
5	5
Enter 2	Shift + OK
6	6
7	7
8	8
9	9
>10	Guide / EPG / -/-
0	0
Enter	OK
D.Tuning	Smart / List
D.Skip/CH/Preset	CH+ / Page+
D.Skip/CH/Preset -	CH- / Page-
Display	Display / Media
A.F.D.	Red / Netflix / Search
2CH / Off	Green / APP / Repeat
MULTI CH / 2CH DIRECT	Info / Angle
Mode-	<< / Tune-





Original	Replacement	Original	Replacement
Mode+	>> / Tune+		
Muting	Mute / Dimmer		
Test Tone	Text / Goto		
Main Menu	Menu / Home		
Master Vol+	Vol+		
Menu Left	Left		
Menu Right	Right		
+	Blue / Prime Video / Random		
Master Vol-	Vol-		
-	Yellow / YouTube / Repeat		

