



 





 

 







 

 

 













Original	Replacement
 Display	 Display / Media
 Power	 Power
 Function-	 Shift + Down
 Function+	 Shift + Up
 Sound	 Sound / Title
 Menu	 Menu / Home
 Timer	 Sleep / Timer
 Up	 Up
 Folder-	 CH- / Page-
 OK	 OK
 Folder+	 CH+ / Page+
 Down	 Down
 Return	 Back / Return
 Clear	 Exit / Cancel / Clear
 I<</Preset-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >>I/Preset+	 >>I / Preset+
 <</Tuning-	 << / Tune-
 Stop	 Stop / Hold
 >>/Tuning+	 >> / Tune+
 Vol+	 Vol+
 Vol-	 Vol-

