













 






















| Original   | Replacement   | Original     | Replacement   |
|------------|---|--------------|---|
| Audio Off  |  Mute / Dimmer   | Rep/A-B      |  Yellow / YouTube / Repeat |
| Game       |  Blue / Prime Video / Random   | Rewind       |  << / Tune-                |
| Pbc        |  AV / Input / RDS  | Repeat/1/All |  Green / APP / Repeat      |
| Digest     |  Text / Goto   | Prev.        |  I<< / Preset-             |
| C/CH       |  Sleep / Timer   | F.Forward    |  >> / Tune+                |
| Auto/Track |  Picture / Format  | 3            |  3                         |
| DVD/TV     |  Smart / List  | 4            |  4                         |
| 3D         |  +  Shift + 3 | 5            |  5                         |
| Menu Down  |  Down  | 6            |  6                         |
| Slow Down  |  CH- / Page-  | 7            |  7                        |
| Slow Up    |  CH+ / Page+   | 8            |  8                       |
| OK Enter   |  OK  | 9            |  9                       |
| Menu Up    |  Up  | +10          |  Guide / EPG / -/--      |
| Progr.     |  TV/Radio /  | 0            |  0                       |
| Menu Right |  Right   | 1            |  1                       |
| 2          |  2   | Angle        |  Info / Angle            |
| Menu Left  |  Left  | Play         |  Play / Slow             |



| Original   | Replacement   | Original | Replacement |
|------------|---|----------|-------------|
| Record     |  Rec / Rec Mode        |          |             |
| Audio      |  Audio / Lang I/II     |          |             |
| Setup      |  Setup / OPT /         |          |             |
| Mark       |  Fav / Marker / PC     |          |             |
| Open/Close |  Eject / Surround      |          |             |
| Menu       |  Menu / Home           |          |             |
| Stop       |  Stop / Hold           |          |             |
| Pause      |  Pause / Step / Freeze |          |             |
| Subt.      |  Subtitle / EQ         |          |             |
| Title      |  Sound / Title         |          |             |
| Zoom       |  Zoom / Size          |          |             |
| On/Off     |  Power               |          |             |
| Display    |  Display / Media     |          |             |
| Return     |  Back / Return       |          |             |
| Next       |  >>I / Preset+       |          |             |
| Top Menu   |  D.Menu / Top        |          |             |
|            |   |          |             |

