








 




 







 
 











 








 
 































	Original	Replacement		Original	Replacement
	Power		Power		Ok
	Sub-T		Subt		Pre Ch
	TTX		Text		Exit
	Mute		Mute		Tv/Radio
	Goto		Smart		Recall
	Repeat		Shift + Text		Info
	EPG		Guide		1
	Lang		Dual		2
	Menu		Menu		3
	Page+		Ch +		4
	Page-		Ch -		5
	Up/CH+		Up		6
	Down/CH-		Down		7
	Right		Right		8
	Vol+		Vol +		9
	Vol-		Vol -		0
	Left		Left		<<





Original		Replacement		Original		Replacement	
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause/Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red/PVR		Red				
	Green/V-Format		Green				
	Yellow/Aspect		Yellow				
	Blue/Timer		Blue				





Original	Replacement	Original	Replacement
Standby	Power	Right / Vol +	Vol +
Sub-T	Subt	Left / Vol -	Left
TTX	Text	Left / Vol -	Vol -
Mute	Mute	OK	Ok
EPG	Guide	FAV	Shift + Pre Ch
Lang	Dual	TV / Radio	TV/R
GOTO	Shift + Guide	Recall	Pre Ch
Repeat	Shift + Text	Info	Info
Page +	Shift + Up	1	1
Page -	Shift + Down	2	2
Menu	Menu	3	3
Exit	Exit	4	4
Up / CH +	Up	5	5
Up / CH +	Ch +	6	6
Down / CH -	Down	7	7
Down / CH -	Ch -	8	8
Right / Vol +	Right	9	9





Original		Replacement		Original		Replacement	
	0		0				
	<< Rev		<<				
	>> Fwd		>>				
	I<< Prev		I<<				
	>>I Next		>>I				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		Shift + Format				
	Blue / Timer		Blue				
	Blue / Timer		AV				

