 

 

 


 



 

 

 
 
 

 




 
 






 

 

 
 













 

 

 

 





 








Original	Replacement	Original	Replacement
	Power		Power
	USB		Smart
	Radio		TV/R
	Coax		3D
	AUX		AV
	MP3 Link		Media
	Audio		Dual
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	I<		I<<
	Play/Pause		Play
	>I		>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		Options
	Treble		Ch +
	Bass		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





	Original	Replacement		Original	Replacement
	8		8		
	9		9		
	0		0		
	Subtitle		Subt		
	Audio Sync		Pre Ch		
	Repeat/Program		Text		
	Repeat A-B		List		
	Zoom		Eject		
	Sound Mode		Green		

