
















 
 




 






 





 



 













Original	Replacement
 Standby	 Power
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 e	 Info / Angle
 Mouse	 Smart / List
 Home	 Shift + Menu /
 TXT	 Text / Goto
 Mix/FAV.List	 Fav / Marker / PC
 Size/Subtitle	 Subtitle / EQ
 Cancel/Audio	 Audio / Lang I/II
 Record	 Rec / Rec Mode
 <</Index	 << / Tune-
 >>/Hold	 >> / Tune+
 I<</Reveal	 I<< / Preset-

Original	Replacement
 >>I/Subpage	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Play/Pause / Timeshift	 Pause / Step / Freeze
 Play/Pause / Timeshift	 Play / Slow
 Down	 Down
 Stop / EPG	 Stop / Hold
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-





Original		Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[*]/Display		Display / Media
	0		0
	Recall		Back / Return

Original	Replacement

