



Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	Picture / Format
	Sleep / Timer
	TV/Radio /
	D.Menu / Top

Original	Replacement
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media





Original	Replacement	Original	Replacement
1	1	Dolby PL	Shift + Subtitle / EQ
2	2	FM Mode	Shift + TV/Radio / Program
3	3	D.MIX	Shift + D.Menu / Top Menu
4	4	Group	Shift + Setup / OPT / Tools
5	5	RDS	Shift + AV / Input / RDS
6	6	Center Focus	Shift + OK
7	7	Position	Shift + Smart / List
8	8	DVD/CD	Shift + 2
9	9	Tuner/Band	Shift + 6
$\geq 10 / -/ -$	$-/ -/ > 10$ Guide / EPG / $-/ -$		
0	0		
Repeat	Green / APP / Repeat		
A-B Repeat	Yellow / YouTube / Repeat		
Power VCR	Shift + Power		
Play Mode	Shift + Play /		
Super Surround	Shift + Sound / Title		
Audio Only	Shift + Audio / Lang I/II		

Original	Replacement
Dolby PL	Shift + Subtitle / EQ
FM Mode	Shift + TV/Radio / Program
D.MIX	Shift + D.Menu / Top Menu
Group	Shift + Setup / OPT / Tools
RDS	Shift + AV / Input / RDS
Center Focus	Shift + OK
Position	Shift + Smart / List
DVD/CD	Shift + 2
Tuner/Band	Shift + 6

