



Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Sleep	 Sleep / Timer
 ATV/DTV	 Eject / Surround	 Vol-	 Vol-
 Power	 Power	 Text	 Text / Goto
 1	 1	 Text Subpage	 Setup / OPT /
 2	 2	 CH. List	 Smart / List
 3	 3	 Subtitle	 Subtitle / EQ
 CH+	 CH+ / Page+	 I-II	 Audio / Lang I/II
 4	 4	 P.Size	 Zoom / Size
 5	 5	 P.Mode	 Picture / Format
 6	 6	 Exit	 Exit / Cancel / Clear
 CH-	 CH- / Page-	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 Vol+	 Vol+	 Right	 Right
 Guide	 Guide / EPG / -/-	 Info	 Info / Angle
 0	 0	 Down	 Down

Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Sleep	 Sleep / Timer
 ATV/DTV	 Eject / Surround	 Vol-	 Vol-
 Power	 Power	 Text	 Text / Goto
 1	 1	 Text Subpage	 Setup / OPT /
 2	 2	 CH. List	 Smart / List
 3	 3	 Subtitle	 Subtitle / EQ
 CH+	 CH+ / Page+	 I-II	 Audio / Lang I/II
 4	 4	 P.Size	 Zoom / Size
 5	 5	 P.Mode	 Picture / Format
 6	 6	 Exit	 Exit / Cancel / Clear
 CH-	 CH- / Page-	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 Vol+	 Vol+	 Right	 Right
 Guide	 Guide / EPG / -/-	 Info	 Info / Angle
 0	 0	 Down	 Down





Original	Replacement	Original	Replacement
SOURCE	RDS AV INPUT AV / Input / RDS		
Text Index	SHIFT + GOTO TEXT Shift + Text /		
Text Reveal	TOP MENU D.MENU D.Menu / Top		
Text Size	SHIFT + SIZE ZOOM Shift + Zoom /		
Text Hold	STEP-FREEZE Pause / Step / Freeze		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		

