

 
 
 


 





 








 



 
 









Original	Replacement	Original	Replacement
PWR On/Off	 Power	1. ?	 1
Info	 Info	2abc	 2
Subt.List	 Subt	3def	 3
TV	 TV/R	4ghi	 4
Text	 Text	5jkl	 5
Zoom	 Eject	6mno	 6
TV/SAT	 AV	7pqrm	 7
Menu	 Menu	8tuv	 8
Menu Up	 Up	9wxyz	 9
Display	 Shift + Info	Guide Pilote	 Guide
Menu Left	 Left	0/10	 0
OK Enter	 Ok	Red	 Red
Menu Right	 Right	Green	 Green
Exit	 Exit	Yellow	 Yellow
Menu Down	 Down	Blue	 Blue
CH/Page+	 Ch +	Freeze	 Stop
CH/Page-	 Ch -	Dec/Pause	 Pause



Original	Replacement	Original	Replacement
East	 >>I		
LNB F.Forward	 >>		
Lang./Rewind	 <<		
H/V Play	PLAY MODE  Play		

