

| Original       | Replacement                                                                         | Original | Replacement |
|----------------|-------------------------------------------------------------------------------------|----------|-------------|
| Power          |    | Power    | Right       |
| Mute           |    | Mute     | Vol +       |
| CD Play/Pause  |    | Play     | Smart       |
| CD Play/Pause  |    | Pause    | Ch +        |
| CD Stop        |    | Stop     | Vol -       |
| TAPE Rec       |    | Rec      | Media       |
| CD ICD I<< <<  |    | I<<      | Ch -        |
| TAPE <<        |    | <<       | 1           |
| TAPE >>        |    | >>       | 2           |
| CD >> >>I      |    | >>I      | 3           |
| D.Skip         |   | List     | 4           |
| SURR           |  | Dual     | 5           |
| Program        |  | Options  | 6           |
| Sleep          |  | Sleep    | 7           |
| Repeat         |  | Text     | 8           |
| TAPE Rev. Play |  | Left     | 9           |
| TAPE Stop      |  | Ok       | 0           |



A black Mandis TV remote control with various buttons. At the top are a red power button, a black mute button, and an orange shift button. Below these is a grid of buttons: TV, DVD, SAT, AUX; PLAY MODE, REC MODE; navigation buttons (play, pause, stop, first, previous, next, last); DISC NAV, SOUND, AD, SETTINGS; LIST, DUAL, SUBT, OPT; PROG, SEARCH, PICTURE, ECO; SLEEP, TV/R, FORMAT, 3D; E-MANUAL, REPEAT, ZOOM, TIMER; D.MENU, TEXT, AV. Below this grid are TOP MENU, MENU, INFO, and a central OK button surrounded by four directional arrows. Further down are CLEAR, EXIT, RETURN, BACK, volume controls (+, -), SMART, APP, MEDIA, channel controls (+, -), CH, and a numeric keypad (1-9, 0, \*, #). Below the numeric keypad are GUIDE, PRE-CH, and four colored buttons (A, B, C, D). At the bottom is the Mandis shop logo and the website www.mandis.tv.