













 







 











 















 



 



 



 
 








Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		HDMI		Shift + 0
	1		1		P-		CH- / Page-
	2		2		Media		Shift + Display / Media
	3		3		P.Mode		Picture / Format
	4		4		Home		Shift + Menu /
	5		5		S.Mode		Sound / Title
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Source		AV / Input / RDS
	9		9		Left		Left
	Lang		Audio / Lang I/II		Enter		OK
	0		0		Right		Right
	Recall		Back / Return		Display		Display / Media
	Vol+		Vol+		Down		Down
	*/Setting		Setup / OPT /		Exit		Exit / Cancel / Clear
	P+		CH+ / Page+		Red		Red / Netflix / Search





	Original	Replacement		Original	Replacement
		Green			Green / APP / Repeat
		Sub.T			Subtitle / EQ
		Yellow			Yellow / YouTube / Repeat
		Blue/Mouse			Blue / Prime Video / Random
		Play			Play / Slow
		Pause			Pause / Step / Freeze
		Stop			Stop / Hold
		<<			<< / Tune-
		>>			>> / Tune+
		I<<			I<< / Preset-
		>>I			>>I / Preset+
		Rec			Rec / Rec Mode

